



COFFEE LEATHER - on flexi

Artikel Nr.

KAF0000190FLXST

Fragrant coffee powder on Flexi (vegan leather).

Immerse yourself in the world of fine aroma with COFFEE LEATHER. This surface combines the distinctive scent of freshly roasted coffee with the timeless elegance of leather. The result: a design that appeals to both the senses and the sense of style. For everyone who wants to feel the coffee kick as much as taste it – welcome to the ultimate home café experience!

Order your DIN A5 sample now!

Fragrant coffee powder in full, premium coverage, available on brown Flexi.

Characteristics


Raw material	Fragrant Coffee Powder
Scent	● ● ●
Light fastness	● ● ●
Abrasion resistance	● ● ●
Vibrancy	● ● ○

Technical details


Backing	Flexi
Format	2.950 x 1.360 mm
MOQ	1 sheet (4,012 m ²)
Weight	600 g/m ²
Thickness	0,2 mm
Flexibility	Bending radii up to 0,5 mm
Translucency	opaque

Material details


Wallpapering technique Do not apply glue to the back of the wallpaper, but to the surface. Please note our glue recommendations.

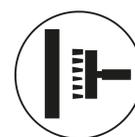

Overlap and double-cut Each panel overlaps approx. 2 cm with the one next to it. Please note the edge tolerance.

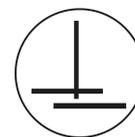

Free match Free match
The naturally scattered materials do not require matching patterns between panels.

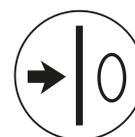

Processing

Wallpaper

Installation of Organoid natural surfaces on Flexi as a wallpaper:

- Wall-pasting technique
- Pay attention to Organoid glue recommendations
- Double cut: Each panel overlaps with the one next to it (approx. 2 cm)
- Cut with scissors, cutter or plotter
- Pre-trials recommended
- In the case of wallpapers, the effect is to be checked after processing three strips. Claims that go beyond the replacement of defective goods will not be accepted.

Processing

Décor

Installation of Organoid natural surfaces on Flexi in woodworking (décor):

- Process with normal wood-working machinery
- Glue (e.g. white glue) is applied onto the wooden materials, as the fleece absorbs moisture and glue stains may appear on the front if glue is applied to the fleece
- Cover the natural surface with the enclosed separating paper
- pressing temperature. 60°C
- For sensitive wood-working applications, use a counter-balance (enclosed on request)
- Cut with scissors, cutter or plotter
- Pre-trials recommended

Processing

Inspiration



ORGANOID GmbH

6500 Fließ

Nesselgarten 422

www.organoids.com

info@organoids.com

Tel. [+43 5449 200 01](tel:+43544920001)

18.2.2026