



SKELETON LEAVES GOLD - on golden paper

Artikel Nr. SKL0000010GTARW

Delicate skeleton leaves from the rubber tree (approx. 200 pieces per m²) in full-surface application on golden paper.

Delicate beauty with an elegant shimmer! This unique surface highlights the fascinating structure of skeleton leaves with a glossy finish. The fine shimmer lends the fragile leaves a luxurious elegance. A perfect fusion of nature's delicacy and refined brilliance.

Order your DIN A5 sample now!

Delicate skeleton leaves in full, premium coverage (approx. 200 pro m²), hand-picked, on golden paper

Characteristics


Raw material	Delicate skelettonised rubber tree leaves
Scent	○ ○ ○
Light fastness	● ● ●
Abrasion resistance	● ● ●
Vibrancy	● ● ○

Technical details


Backing	Golden Paper
Format	Rolled goods, width: 1,360 mm
MOQ	1 m ² (ca. 0.74 running metre)
Weight	230 g/m ²
Thickness	0,3 mm
Flexibility	bending radius up to 2 mm
Translucency	opaque

Material details

Overlap and double-cut Each panel overlaps approx. 2 cm with the one next to it. Please note the edge tolerance.

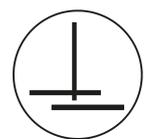

Wallpapering technique Do not apply glue to the back of the wallpaper, but to the surface. Please note our glue recommendations.

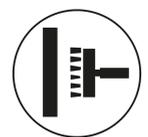

Processing

Décor

Installation of Organoid natural surfaces on golden paper in woodworking (décor):

- Process with normal wood-working machinery
- Glue (e.g. white glue) is applied onto the wooden materials, as the fleece absorbs moisture and glue stains may appear on the front if glue is applied to the fleece
- Cover the natural surface with the enclosed separating paper
- pressing temperature. 60°C
- For sensitive wood-working applications, use a counter-balance (enclosed on request)
- Cut with scissors, cutter or plotter
- Pre-trials recommended

Processing

Wallpaper

Installation of Organoid® natural surfaces on golden paper as a wallpaper:

- Wall-pasting technique
- Additional soaking with a sponge and clear, cold water
- Pay attention to Organoid glue recommendations
- Double cut: Each panel overlaps with the one next to it (approx. 2 cm)
- Cut with scissors, cutter or plotter
- Pre-trials recommended
- In the case of wallpapers, the effect is to be checked after processing three strips. Claims that go beyond the replacement of defective goods will not be accepted.

Processing

Inspiration



ORGANOID GmbH

6500 Fließ
Nesselgarten 422
www.organoids.com
info@organoids.com
Tel. [+43 5449 200 01](tel:+43544920001)

18.2.2026